

PREPARING THE GENERATOR FOR HYDROGEN INHALATION

To use the generator for hydrogen inhalation, you will need:

01. Remove the generator lid.

02. Fill the container with 11.83 fl oz (350 ml) of drinking water.

03. Attach the inhalation adapter and insert the tube.

04. Select the 18-minute electrolysis mode.

05.Begin the process and start inhalation.
- 

+

The hydrogen water generator.

+

Inhalation adapter.

+

Hydrogen tube.

During inhalation, hydrogen is released through the tube, and the concentration shown may not reach maximum values — this is normal.

MAINTENANCE

- 01.Clean the bottle and lid using a slightly damp cloth moistened with water (do not allow moisture to enter the charging port).

02.**Attention!** At least once a month, with regular use, it is necessary to clean the main unit. Fill the device with clean drinking water. Swipe left or right on the screen to switch modes. Swipe until "Self-Cleaning Mode" appears and start the cleaning cycle. After the cycle is complete, drain the water. Repeat the cleaning process if necessary.

03. **Attention!** Do not wash the body, main unit, or lid in a dishwasher.

04. **Attention!** Do not wash the main unit or lid under running water, and do not immerse them partially or completely in water.

If moisture enters the charging port, immediately disconnect the device from the power supply and do not use it until it is completely dry.

Ensure the moisture/maintenance cap is removed before operation to avoid dry-heating damage.

SAFETY INSTRUCTIONS

- +

Before using the generator, carefully read this user manual.

+

Do not charge the device using fast-charging adapters. Use only the original charging device.

+

Use only drinking water. Do not pour carbonated drinks, sweet beverages, tea, coffee, or any other liquids into the device.
- +

To avoid damage to the battery and control components, do not immerse the main unit or lid in water, and do not allow water to enter the charging port.

+

Do not start the electrolysis cycle if the generator is not filled with water.

+

Do not use water with a temperature above 113°F (45°C).

+

Do not expose the device to temperatures below 32°F (0°C).

CHARGING THE DEVICE

01. When the battery level drops below 10%, the screen will show a "Low Battery" warning.


02. Open the rear cover to access the Type-C charging port.

03. Use the supplied cable and adapter.

03.While charging, the device shows a charging indicator on the screen.

04.The device supports wireless charging. To charge, place the bottom part of the main unit onto a compatible wireless charging pad. The maximum wireless charging power is 5 W.

Do not run hydrogen generation while charging.

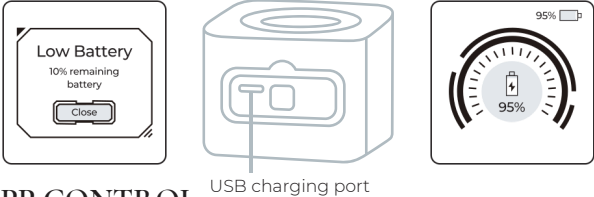

APP CONTROL

This device supports Bluetooth connection with a mobile application.

How to Install the App:

- +

Android: scan the QR code (provided in the printed manual) where you will find the link to download the app.

+

iOS: search "Hydrogen Cup" in the App Store.

App Features:

- +

Bluetooth pairing with the device (CUPSP-XXX).

+

Remote control of electrolysis.

+

Timer settings and drinking reminders.

+

Backwash/self-clean control.

+

Hydrogen (ppb) and ORP monitoring.

+

Battery level display.

UV STERILIZATION AND SCHUMANN RESONANCE

The device includes additional functions:


01. UV sterilization (280/450 nm).

02. Schumann resonance frequency module (7.8 Hz).

These functions are controlled using the ON/OFF button located on the lid.

Ultraviolet (UV) Light Sterilization and Schumann Wave Function On/Off Switch

Type-c

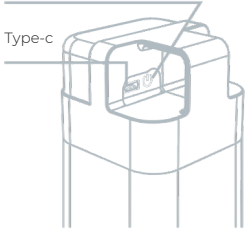

TECHNICAL SPECIFICATIONS

Product Name:	Hydrogen Water Generator Pro
Dimensions:	2.56 × 2.56 × 8.27 in (65 × 65 × 210 mm)
Hydrogen Concentration:	up to 9000 ppb*
ORP Value:	down to -750 mV*
Power Consumption:	≤10 W
Main Unit Battery:	4000 mAh (rechargeable lithium battery)
Lid Battery:	300 mAh
UV LEDs:	280 / 450 nm
Charging Port:	USB Type-C
Resonance Module:	7.8 Hz
Water Type:	Drinking water
Water Capacity:	11.8 fl oz (350 ml)
Device Lifespan:	approx. 8000 hours
Electrolyzer Lifespan:	approx. 8000 hours
Membrane Type:	DuPont™ Nafion™ N117 (platinum-plated)
Electrode Material:	Titanium with platinum coating
Body Material:	Tritan™ plastic and aluminum alloy housing
Net Weight:	0.97 lb (440 g)
Gross Weight:	3.04 lb (1380 g)

Values marked with * are approximate and may vary depending on water quality and usage conditions.



HYDROGEN WATERGENERATOR PRO WITH MINERALIZER

USER MANUAL

Please read the instruction manual carefully before using the device

DESCRIPTION OF THE HYDROGEN WATER GENERATOR

The hydrogen water generator is a household electrical device designed to produce drinking water enriched with molecular hydrogen. The operation is based on electrolysis: under the influence of an electric current, water is enriched with molecular hydrogen.

- The package includes two mineral pouches. They enrich the water with minerals and increase its pH level. Composition: shungite, silicon, zeolite, magnesium. The minerals do not remove organic contaminants. For deeper purification, use an additional filtration system.
- The hydrogen water generator is equipped with UV-C LEDs (~280 nm / ~450 nm) and an additional low-frequency functional module (~7.8 Hz), which perform a supporting function and enhance the overall operation of the device. The device is designed for use with water that meets drinking water standards.

BENEFITS OF HYDROGEN WATER:

- Supports overall wellness
- Ideal for everyday use
- Helps maintain daily hydration
- Promotes a balanced lifestyle
- Refreshes and revitalizes
- Designed for modern living

Portable hydrogen water generators are a convenient solution for home, work, or travel. To prepare healthy water, simply fill the generator with drinking water and start the device.




PACKAGE CONTENTS



THE HYDROGEN WATER GENERATOR CONSISTS OF:

- 01. Lid;
- 02. Body;
- 03. Touchscreen display;
- 04. Titanium electrode with platinum coating;
- 05. SPE membrane;
- 06. Main unit;
- 07. Pressure-relief valve and protective cover;
- 08. UV Sterilization Button;
- 09. Maintenance/moisture cap for membrane protection (for transportation only — remove before first use and discard).

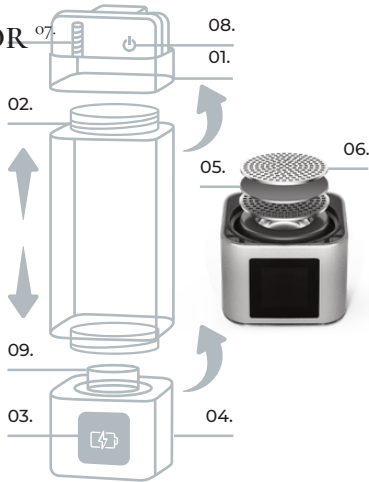

HOW TO USE

- 01. Open the membrane's protective cap, drain the liquid, and dispose of the cap properly. Do not reuse it, as it is no longer needed.
- 02. Fill the bottle with clean drinking water.
- 03. Swipe left or right on the screen to switch modes. Tap the display to select "Self-Cleaning Mode."
- 04. Start the self-cleaning cycle.
- 05. After the cycle is complete, drain the water.
- 06. Repeat the cleaning process 3 times.

After completing all steps, the device is ready for use.

HYDROGEN WATER PREPARATION PROCESS:



- 01. Fill the generator with drinking water up to the 11.83 fl oz (350 ml) mark and close the lid.
- 02. To turn on the device, briefly press and hold the power button for about three seconds.

03. A touchscreen interface will appear. Choose the duration of hydrogen generation:

- 3 minutes;
- 18 minutes.

04. After selecting the mode, the electrolysis process will begin. The display will show a timer, hydrogen concentration (ppb) and ORP level (mV).

3-minute mode — quick drinking mode.

18-minute mode — deep hydrogen saturation and inhalation mode.

05. When the process is complete, the device will turn off automatically. Press the pressure release valve on the lid first, then open the lid. Hydrogen concentration now reaches 2000–9000 ppb, ORP down to -750 mV, depending on water quality.

ALKALINE IONIZED WATER PREPARATION (WITH MINERALIZATION BALLS)

- 01. Insert the mineral pouch (mineralization balls) into the cartridge and close the filter housing.
- 02. Fill the generator with drinking water up to 8.5–9.3 fl oz (250–275 mL).
- 03. Place the mineral cartridge into the generator bottle and close the lid.
- 04. Then follow steps 2–5 of the main instructions.

Recommended mode when using the mineral cartridge: 18 minutes. After mineralization, remove the cartridge from the generator and dry it separately. Do not leave the cartridge in a humid environment inside the device.

Service life of the mineral pouch (2 pcs included): from 3 to 6 months, depending on usage intensity.

OPERATING RECOMMENDATIONS

- ✦ If not used for a long time, fill the container with warm drinking water (95–113°F / 35–45°C) and leave for 30 minutes, then rinse before reuse.
- ✦ Use only drinking water.
- ✦ Drink hydrogen water immediately after preparation.
- ✦ Do not use water above 113°F (45°C).
- ✦ Do not leave water in the container for more than 4 hours.
- ✦ Do not run electrolysis consecutively on the same cup of water as pressure may build up.

HOW TO OPEN AND CLOSE THE LID

To open the lid:

- 1. Press the pressure release valve to release pressure.
- 2. Press and lift the lid.

To close the lid:

- 1. Align the lid with the opening.
- 2. Press and turn the lid clockwise until it is closed.

After the 18-minute mode, press the pressure release valve on the lid first to avoid resistance, and then open the lid.